

PROTECTOR FOREST

Art.-Nr. 603101




CE EN ISO 20345:2011 SB E HRO HI CI WR WRU FO SRA

Leather thickness 2.8 - 3.0 mm, breathable and waterproof with GORE-TEX® Performance, cut protection class 2, leg height 22 cm, VIBRAM 050 sole

Available sizes: UK 5 - 12, Extra sizes: UK 12 ½ - 13



603101

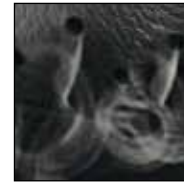

HAIX® Climate System



Upper Material

Suede, hydrophobized, breathable, 2.8 – 3.0 mm thick

Cut Protection

KEVLAR® class 2 cut protection (24 m/sec). Conforming to EN ISO 17249:2007

Inner Lining

GORE-TEX® Performance; 4-layer GORE-TEX® Laminate, waterproof and breathable. Abrasion-proof lining fabric with fleece inner layer. Optimized climate comfort for all seasons even under extreme conditions. Enhanced protection against chemicals

Plastic/fleece insole

Moisture absorbent, anti-torsion design for outstanding stability, reducing point pressure (from stones, etc.)

Foot bed

Comfortable, impact-absorbing, moisture-wicking, antibacterial. Separate heel cup ensures optimized cushioning and foot guidance

Protective toe cap

Anatomically designed, wide cushioned toe cap

Sole

Sturdy VIBRAM rubber/PU anti-slip sole with rugged profile, abrasion-proof. The lightweight PU cushioning guarantees excellent impact absorption and proper toe-to-heel movement. The non-marking outer sole is resistant to heat, oil and gasoline. Conforming to EN ISO 20345:2011.

HAIX® Climate System

HAIX® Climate System with Micro-Dry lining along upper shaft end

HAIX® 2-Zone Lacing

Two-zone lacing system for optimum fit to the foot and along the shaft

Other features

Anti-friction lacing elements, no side seams, sturdy sole edge, with rubber toe and heel protection for prolonged service life

UK	3	3½	4	4½	5	5½	6	6½	7	7½	8	8½	9	9½	10	10½	11	11½	12	12½	13	13½	14	14½	15
EU	35	36	37	37	38	39	39	40	41	41	42	43	43	44	45	45	46	47	47	48	48	49	50	50	51
US	4	4½	5	5½	6	6½	7	7½	8	8½	9	9½	10	10½	11	11½	12	12½	13	13½	14	14½	15	15½	16

HAIX®-Schuhe, Produktions- und Vertriebs GmbH
Auhofstrasse 10, 84048 Mainburg, Germany
T. +49(0)8751/8625-0, F. +49(0)8751/8625-25
Email: info@haix.de, Internet: www.haix.com